DENVER®

7” Widescreen Color TFT LCD
Digital Photo Frame

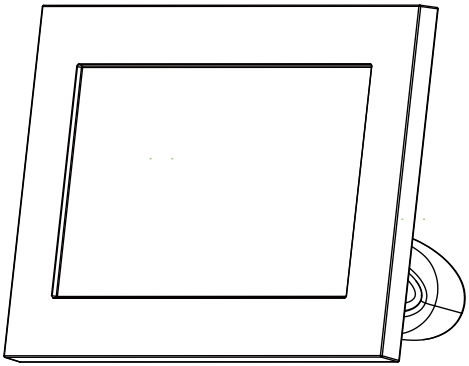

DPF-746

INSTRUCTION MANUAL

Please read this manual carefully before operation

PRECAUTIONS

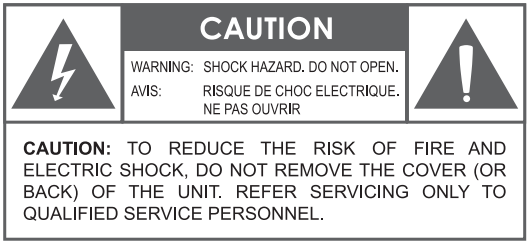
CAUTION
WARNING: SHOCK HAZARD. DO NOT OPEN.
AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For Customer Use:
Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. DPF-746

Serial No. _____

PRECAUTIONS

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

Protect your hearing: Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

12. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
15. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
16. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
17. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

IMPORTANT SAFETY INSTRUCTIONS

19. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
21. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
23. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

TABLE OF CONTENTS

PRECAUTIONS....2

IMPORTANT SAFETY INSTRUCTION....4

PACKAGE CONTENTS....8

UNIT VIEW....9
- Function Buttons....9

ATTACHING THE BRACKET....10

POWER CONNECTION....11

GETTING STARTED....12
- Installing a Memory Card....12
- Turning Your Photo Frame ON/OFF....12
- MENU Interface....12
- Photo....13
- Favourite....13
- Edit....13
- Auto-Power....13

CLOCK MENU....14
- Clock....14
- Calendar....14

SETUP MENU....15
- Setup....15

TROUBLE SHOOTING....16

SPECIFICATION....17

PACKAGE CONTENTS

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

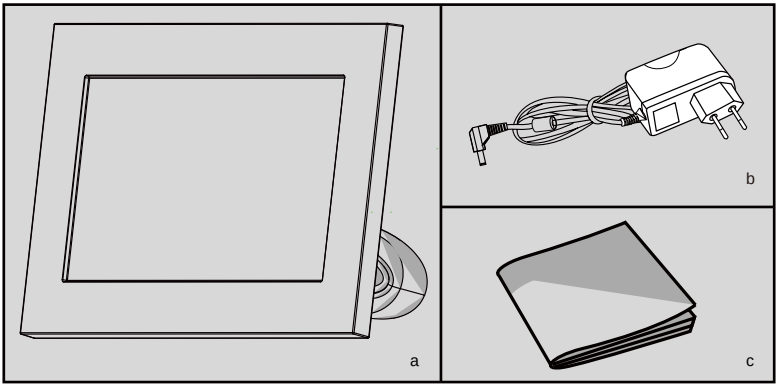

a Main Unit
b Adaptor
c User's Guide

UNIT VIEW

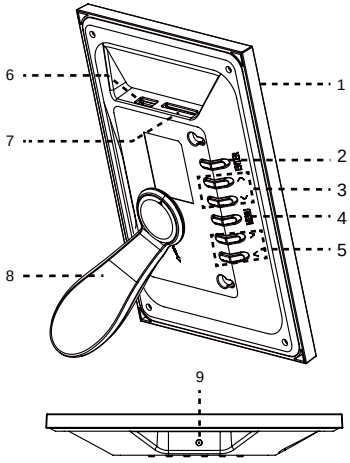

Function Buttons

1. TFT Display
2. ENTER
   Press and hold the button to turn on/ off the unit. While working with the menu, press the button to confirm the menu option. In the SlideShow mode, press the button to pause the playback.
3. Lfte/Right Direction
   Press to move the cursor left/right in menu setting and also can be used to turn pages in the full screen display mode.
4. MENU
   Press and hold the button to show the setup menu.
5. Up/Down Direction
   Press to move the cursor up/down in menu setting and also can be used to turn pages and rotate pictures in the full screen display mode.
6. USB Slot
   Connect with USB.
7. Card Slot
   Connect the SD/MMC/MS Card
8. Bracket
   Hold the unit in an upstanding/landscape orientation
9. Power Jack
   Connect with the power source.

ATTACHING THE BRACKET

Attach the Bracket

Match the bracket to the bracket jack on the bottom of the cabinet, push to the arrow direction to lock it in place. To release the bracket, pull to the opposite direction.

The photo frame can stand in either the upstanding orientation or the landscape orientation depending on your own choice.

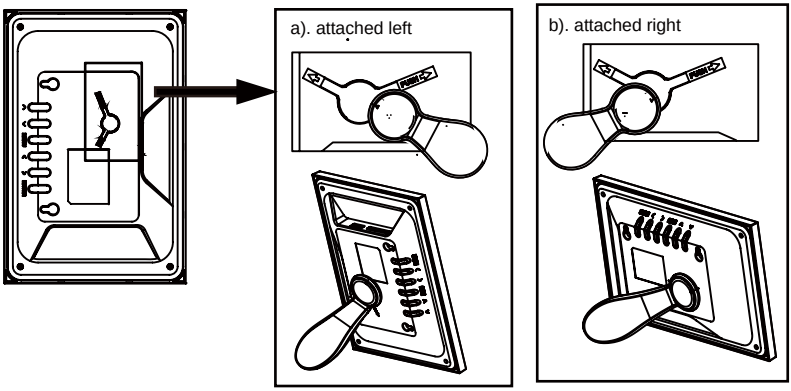

POWER CONNECTION

Power Connection

- Connect one end of the supplied adaptor to the unit's power jack on the unit bottom cabinet and the other end to the wall outlet with AC100-240 V.
- Upon being powered, the unit displays the standard logo. But if there is a playback source already in the memory location, the unit would start playback automatically.
- Press and hold the ENTER button to turn on/off the unit after it is connected with the power adaptor, or it will start playback automatically after connected with the power adaptor.
- Unplug the adaptor when it is not in use.

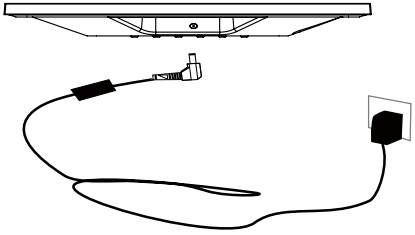

Do not connect the power plug to a power outlet other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Use only AC adapters of the type specified here. Failure to do so may cause a fire or damage the player.

Installing a Memory Card

Your digital photo frame is compatible with the following memory cards:

- Secure Digital Card (SD)
- Multimedia Card (MMC)
- MS Card(Optional)

Insert the memory card with the label side facing yourself. Do not force the memory card into the slot. If you are not able to insert the memory card easily, you may have inserted it in a wrong way.

Turning Your Photo Frame ON/OFF

- After connecting to the power, the photo frame will playback automatically, display the demo slideshow. You can press and hold ENTER button to turn on/off your photo frame during playback.

MENU Interface

Upon turning on the power and inserted a card contains supported photo files, your photo frame will display the demo slideshow, press the MENU button to display the MENU interface shown below:

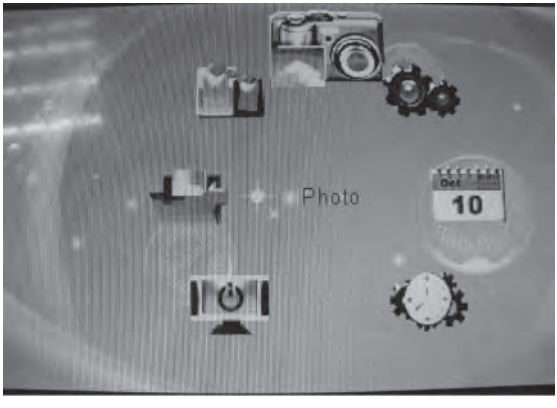

Use the left/right button to select the desired option, press ENTER button to confirm.

Photo

Upon entering the Photo menu, the screen displays the playback source: USB, SD/MMC, MS. Use the left/right button to select the playback source.The icon of the inserted playback source will be highlighted, then press ENTER to playback.

Favourite

You can save your favourite pictures and view them through this option.

Edit

Upon entering the Edit menu, the screen displays the Edit Dialog, then you can select Copy/Delect mode to copy/delete the files, and select Exit to exit, press ENTER to confirm.

Auto-Power

Upon entering the Auto-Power menu, the screen displays the Auto-Power Setting .

Auto-Power Setting

Option	Description	Default
Power On Enable	To enable the power on function	off
Power Off Enable	To enable the power off function	off
Set Time	To set the power on/off time. Upon entering the setup option, select the power on/off option and press enter button to confirm. Press the up/down button to select the desired time.	
Exit	To exit from auto-power setting	

CLOCK MENU

Clock

Clock Setting

Option	
Display	To display the Clock, Analog Clock or Clock&Calender
Time Format	To select the time format:12 Hour or 24 Hour, the default setting is 12Hour
Set Time	Use the left/right button to select the time, then use up/down button to select the desired time
Set Data	Use the left/right button to select the data, then use up/down button to select the desired data
Exit	To exit from Clock setting

Calendar

1. Select Calendar, press ENTER to display the calendar.
2. If the selected playback source has JPEG files, it will be displayed to the right window in the SlideShow mode.
3. You can adjust the time and data in Clock menu, please refer to the Clock Setting.
4. Press Menu to exit from Calendar.

SETUP MENU

Setup

You can select the Setup menu in the main menu, or press and hold MENU button to enter the Setup menu.

Setup Menu

Option	Description	Default
Zoom	Zoom pictures. Press and hold MENU button to enter Setup menu, set ZOOM option as on, then press MENU button again to exit from Setup menu, now you can repeatedly press ENTER button to zoom pictures.	off
Interval Time	Set the SlideShow interval time.Enter this option,press the up/down button to set the interval time.	5 Sec
Transition Effect	Set the transition effect. Enter this option,press the up/down button to set the transition effect.	Random
Show Type	Set the show tape of the pictures as Fit screen/Full screen.	Fit screen
Magic Slideshow	Set the magic slideshow	off
TFT Brightness	Adjust the display brightness.	0
TFT Contrast	Adjust the display contrast.	0
TFT Saturation	Adjust the display Saturation.	0
OSD Language	Set the OSD language	English
Auto Rotation	Set the auto rotation function On/Off. When this function is set On, the displayed picture would rotate automatically as you turned and tossed your photo frame.	on
Default	Set to the default setting	Read
Exit	To exit from the setup menu	

TROUBLE SHOOTING

The player does not turn on.

- Make sure the unit has been powered on properly.
- Ensure that the power cord has been properly connected to the power outlet.

I cannot select a memory card.

- Ensure that a memory card has been installed.
- Ensure that the memory card is properly installed.
- Ensure that the memory card is not defective.

The photo frame has malfunctioned

- Turn the photo frame off and let it rest for 30 minutes. After that, turn on the photo frame -- the restore function should reset the photo frame.

SPECIFICATION

Display Type	7” Full-Color TFT LCD
Display Resolution	480×3(RGB)×234
Memory	MS Card SD/MMC Card Full-size USB
Photo Format	JPEG BMP
USB Host	USB 2.0 High-Speed
Power Supply	DC 5V, 1A, 100-240V AC Adapter

Specifications and manual are subject to change without prior notice.

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

ALL RIGHT RESERVED, COPYRIGHT DENVER ELECTRONICS A/S,
www.denver-electronics.com